


Caution


Natural latex rubber power bands may cause allergic reactions.

Power Bands


❶ Remove plastic band clip by pressing up through bottom clip receiver opening. With pouch ammo socket facing up and no twist to bands, insert ends through receiver opening.

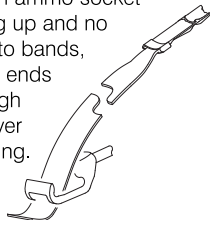

❷ Press band-clips in (underside bulge faces clip receiver's socket) and down until fully seated and snapped in place.

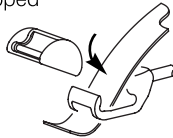

❸ Shorten bands for more speed and power. Cut excess leaving 2 cm tail.

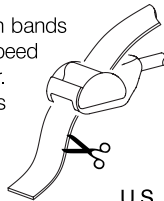

U.S. Patents Pending

Important

Bands should be equal length for best accuracy. As speed increases so does band wear and possible pouch snap-back. Wear a glove if pouch snaps back and hits fingers.

Safety Rules

- ❶ Shooter & spectators must always wear safety glasses.
- ❷ Shooters under 14 must be supervised by an adult.
- ❸ Never point a slingshot at a person or up in the air and always know where ammo will land.
- ❹ Shoot only 1/2 inch (50 caliber, 12.7 mm) steel ammo. Never shoot rocks, glass marbles, steel nuts or other ammo.

SAUNDERS ARCHERY
POB 1707 • COLUMBUS
NE 68602-1707

402-564-7176
800-228-1408
FAX: 402-564-3260
www.sausa.com



©Copyright 2009 Saunders Archery Co.